


UT002028P21T

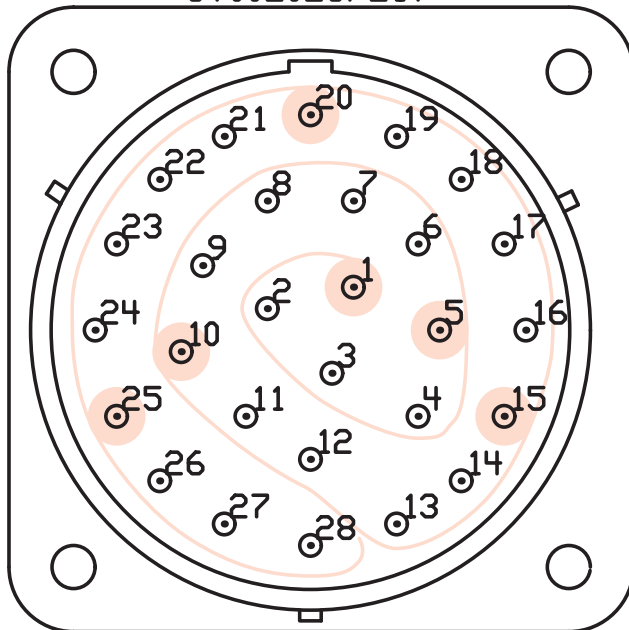

PS-inverter
external view

1	-	A	+10V
2	-	A	GND
3	-	A	+5V
4	-	A	-5V
5	-	A	GND
6	-	A	RTA1
7	-	A	RTA2
8	-	B	+10V
9	-	B	GND
10	-	B	+5V
11	-	B	-5V
12	-	B	GND
13	-	B	RTB1
14	-	B	RTB2
15	-	C	+10V
16	-	C	GND
17	-	C	+5V
18	-	C	-5V
19	-	C	GND
20	-	C	RTC1
21	-	C	RTC2
22	-	D	+10V
23	-	D	GND
24	-	D	+5V
25	-	D	-5V
26	-	D	GND
27	-	D	RTD1
28	-	D	RTD2