



Patch-Panel 2 Forward Updated March-2001

PP2F_J2K PCB
has JA and JB in reverse order
all other things are same as barrel PP2




Supply Limiters

$$U_{lim} = U_{ref} * \left(1 + \frac{R1 + X * R2}{R3 + (1 - X) * R2} \right)$$

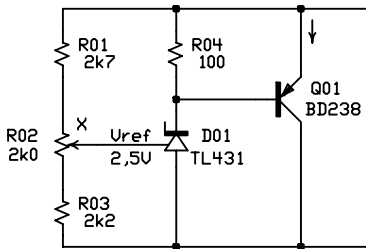

**A Note On
Supply Limiters:**
See new schematic
proposal in
NEWLIMIT.PDF

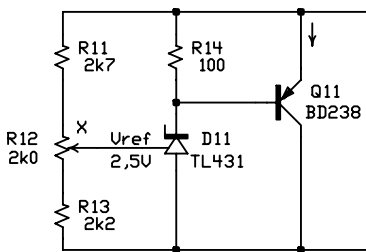

Conv. Cable Pinout

Connector type :
DBC-25F, SCEM 09.21.21.90.6

